

MONESSEN HEARTH SYSTEMS

149 Cleveland Drive • Paris, Kentucky 40361

DESIGNER FACINGS - ARCHED CABINET DOOR FRAME AND ARCHED SCREEN FRAME INSTALLATION INSTRUCTIONS

FRAMES WILL FIT MONESSEN 1000, 2000 AND
3000 SERIES DIRECT-VENT FIREPLACES

IMPORTANT: Read entire instruction sheet before assembling or installing arch face

WARNING

It is recommended that a 50% vinegar and water solution be used to clean the gold and pewter facings while the unit is turned off and cooled. Any fingerprints that are on the facings before the unit is turned on will permanently damage the surface if not cleaned prior to operation.

WARNING

Before installing the face, turn off the fireplace and allow to cool. Only a qualified service person should service and repair the fireplace. A qualified service person should connect and disconnect the fireplace to gas supply. Follow all local codes.

Arched Cabinet Door Frame packaging contains:

QTY. Description

| | |
|---|---|
| 1 | Arched Cabinet Door Frame/ or Arched Screen Frame |
| 1 | Adjustable Bracket |
| 2 | Locking Nuts (8-32) |
| 2 | Springs |
| 2 | Self-threading screws (#8 x 1/2") |
| 2 | Self-threading screws (#8 x 1") |

***Hinges and screws are packaged with the Arch Door Packaging.**

***Adjustable wrench is needed for proper installation.**

1. Before starting, remove all the facing components and check parts to parts list.

2. Attach adjustment bracket to the top of the arched cabinet door frame/ arched screen frame using the locking nuts provided. (See Figure 1)

3. Measure from the mounting pin on the firebox to front edge of the arched face. (See Figure 2)
3A. If you have an arched cabinet door frame, the hinges need to be installed on to the arch. The hinges are installed with the pin pointing up. Attach with two self-threading screws. (See Figure 3)

4. The measurement from the pin hole of the adjustable bracket to the front of the arch cabinet door frame/ arch screen frame will be the same as the measurement in line item (3). (See Figure 1)

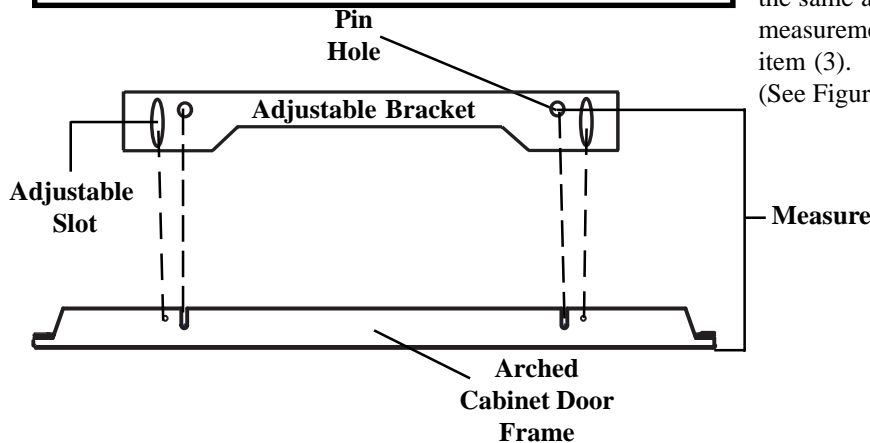


Figure 1 - Attaching adjustment bracket to arch frame

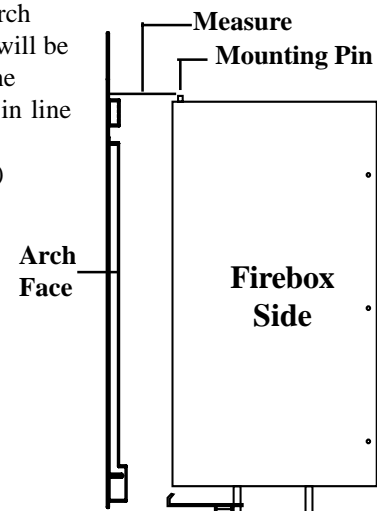


Figure 2 - Measuring distance between mounting pin and arch face

WARNING




It is recommended that a 50% vinegar and water solution be used to clean the gold and pewter facings while the unit is turned off and cooled. Any fingerprints that are on the facings before the unit is turned on will permanently damage the surface if not cleaned prior to operation.

5. Install arched cabinet door frame/ arched screen frame on pin of the firebox.

6. Once frame is installed on the pin of the firebox, attach one end of the springs through the holes of the bottom flange of the door latching system and the other end through the hole tabs at the bottom of the arched cabinet door frame. (See Figure 4)

7. If arch face is flushed mounted, adjustment screws are not needed

8. If arch face is offset, you will need to adjust screws until arch frame is flush with arch face. If face is 1/2" or less, use 1/2" screws provided. If 1/2" - 7/8", use 1" screws. (See Figure 5)

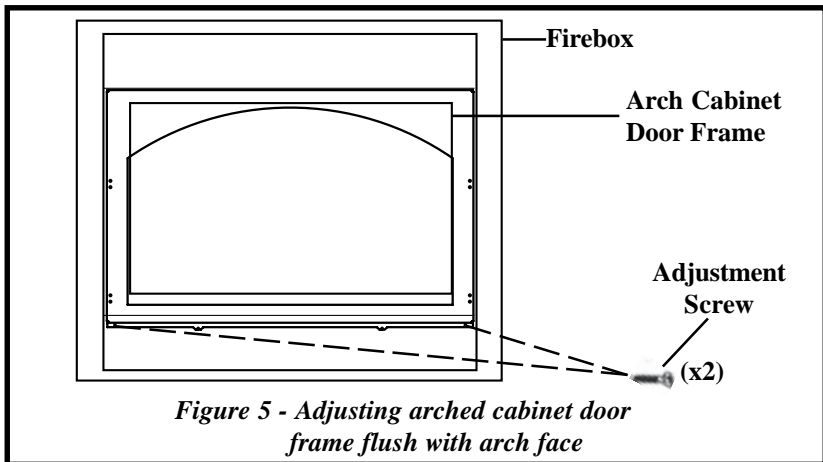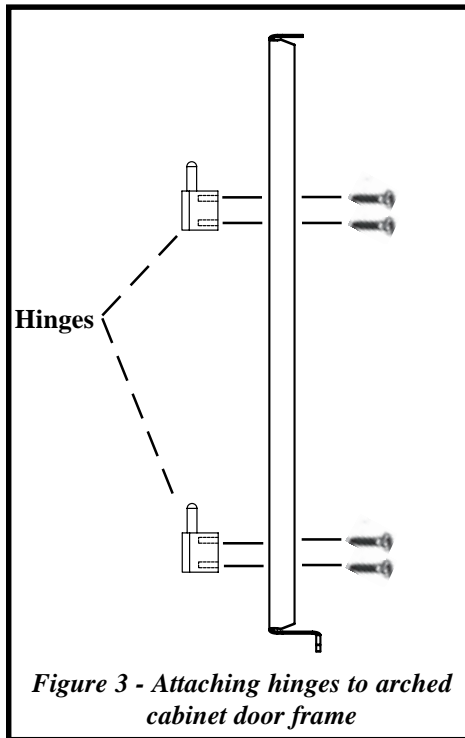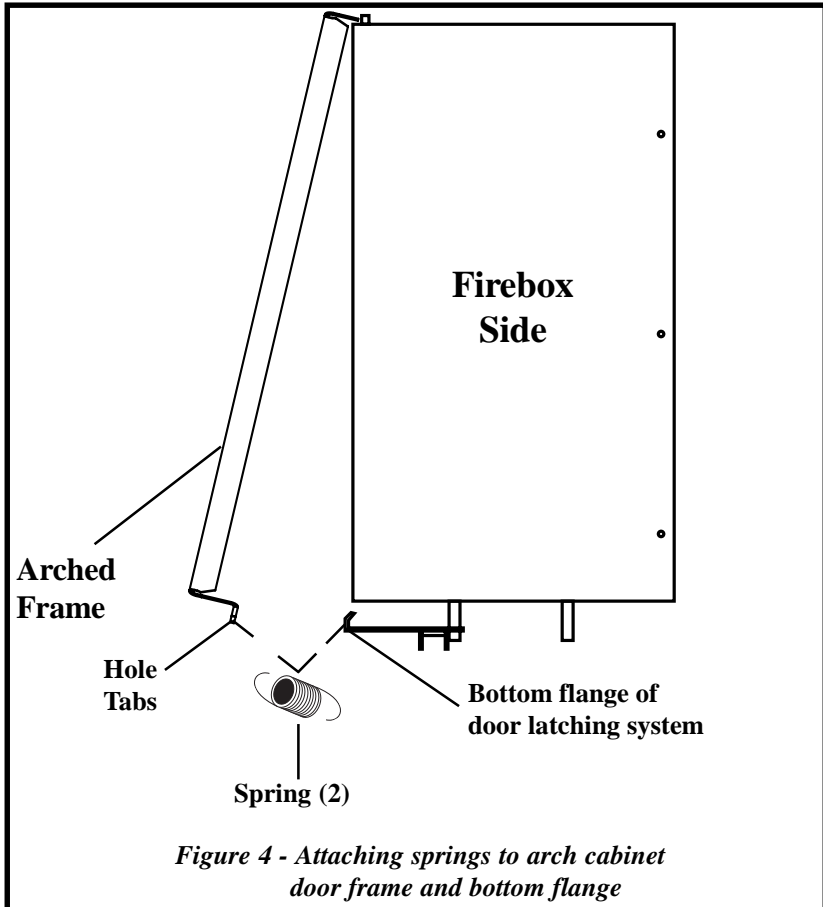

WARNING

It is recommended that a 50% vinegar and water solution be used to clean the gold and pewter facings while the unit is turned off and cooled. Any fingerprints that are on the facings before the unit is turned on will permanently damage the surface if not cleaned prior to operation.